


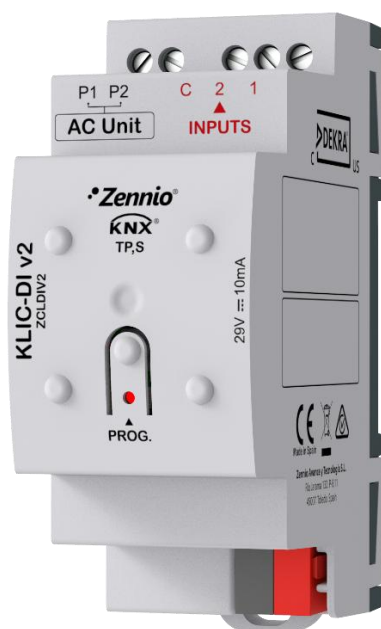

KLIC-DI v2

KNX - Daikin Gateway for Commercial and Industrial Range Daikin A/C Units

ZCLDIV2

Application program version: [1.5]

User manual edition: [1.5]_a

CONTENTS

Contents	2
Document Updates	3
1 Introduction	4
1.1 KLIC-DI v2	4
1.2 Start-Up and Power Loss	5
2 Configuration.....	6
2.1 General.....	6
2.2 A/C Gateway	9
2.2.1 Configuration	9
2.2.2 Initial Configuration	25
2.2.3 Scenes	26
2.2.4 Error Handling	28
2.3 Inputs	30
2.3.1 Binary Input.....	30
2.3.2 Temperature Probe.....	30
2.3.3 Motion Detector	30
2.4 Logic Functions.....	31
ANNEX I. Communication Objects.....	32

DOCUMENT UPDATES

Version	Changes	Page(s)
[1.5]_a	Changes in the document: - The setpoint temperature can be adjusted in increments of 0.5°C. - Up to 5 fan speeds are allowed.	-
[1.3]_a	Changes in the document: - Added filter functionality. - Keep saved scenes or configure it by parameters functionality is added. - Added automatic fan speed.	25 8 16
[1.2]_b	Changes in the document: Clarification on KLIC-DI v2 configuration in case of controlling units with R32 refrigerant.	12
[1.2]_a	Changes in the application program: - Object to receive the temperature of the master control probe. - Optimisation of the Heartbeat, Logic Functions and Temperature Probe modules.	-
[1.1]_a	Changes in the application program: - Functionality <i>Operation mode management</i>: - Parameter is removed. - New status object to know the type of machine being controlled. - Optimisation of the Binary Inputs and Motion Detector modules.	-

1 INTRODUCTION

1.1 KLIC-DI V2

KLIC-DI v2 from Zennio is a gateway that enables **full-duplex** communication between the KNX home automation system and **commercial and industrial range Daikin air-conditioning systems** through the 2-wire connection provided by the latter.

Because of this **bidirectional** communication, the air conditioning system can be controlled from the home automation system in the same manner as it is through its own controls. Moreover, the actual status of the unit can be monitored and periodically sent to the KNX bus to inform other devices.

The most outstanding features of KLIC-DI v2 are:

- **Bidirectional control** of Daikin A/C units of **SKY** commercial range or **VRV** industrial range with variable refrigerant volume.
- Control of the **main functions** of the commercial and industrial range Daikin A/C unit: On/Off, temperature, mode of operation, fan speed, swing of the flaps, etc.
- **Error management** to handle specific error codes from the A/C unit itself as well as any communication issues that may arise.
- **2 analogue-digital inputs**, for the connection of temperature probes, motion detectors or binary pushbuttons or switches.
- **10** customisable, multi-operation **logic functions**.
- Up to **five scenes**.
- **Heartbeat** or periodic “still-alive” notification.

1.2 START-UP AND POWER LOSS

Depending on the configuration, some specific actions will be performed during the device start-up. The integrator may set up an initial status to be sent to the A/C unit after the bus power restored, as well as the sending of certain objects to the KNX bus, as described in later sections.

On the other hand, when a bus power failure takes place, the device will interrupt any pending actions, and will save its state so it can be recovered once the power supply is restored.

2 CONFIGURATION

2.1 GENERAL

The general configuration of the device consists in enabling the specific functionalities that will be required during normal operation:


- **Heartbeat** or periodic “still-alive” notification.
- **Inputs.**
- **Logic functions.**
- **Device Recovery Objects.**
- **Scenes after Download.**
- **A/C Gateway.**

The latter entails all functions specific to KLIC-DI v2, i.e., all the functions related to interfacing with the A/C unit and to the management of the climate control system.

ETS Parameterisation

After importing the corresponding database in ETS and adding the device into the topology of the desired project, the configuration process begins by entering the Parameters tab of the device.

The General screen is shown in the first place, containing the following parameters:

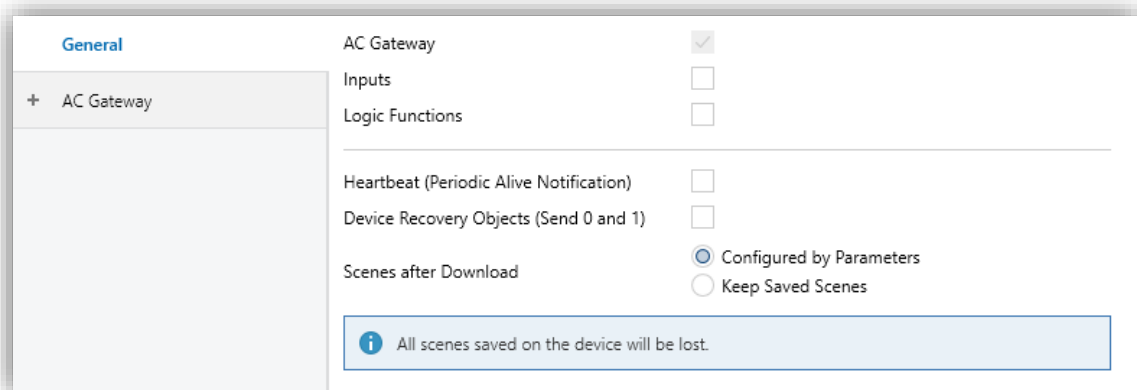

General	AC Gateway	☒
+ AC Gateway	Inputs	☐
	Logic Functions	☐
	Heartbeat (Periodic Alive Notification)	☐
	Device Recovery Objects (Send 0 and 1)	☐
	Scenes after Download	☒ Configured by Parameters ☐ Keep Saved Scenes

i All scenes saved on the device will be lost.

Figure 1. General.

- **A/C Gateway** [\[enabled\]](#)¹: enables the “A/C Gateway” tab in the tree on the left. For more information, see section 2.2.
- **Inputs** [\[disabled / enabled\]](#): enables or disables the “Inputs” tab in the tree on the left, depending on whether the device will or will not be connected any external accessories. For more information, see section 2.3.
- **Logic Functions** [\[disabled / enabled\]](#): enables or disables the “Logic Functions” tab in the tree on the left. For more information, see section 2.4.
- **Heartbeat (Periodic Alive Notification)**: this parameter lets the integrator incorporate a 1-Bit object to the project (“**[Heartbeat] Object to Send ‘1’**”) that will be sent periodically with value “1” to notify that the device is still working.

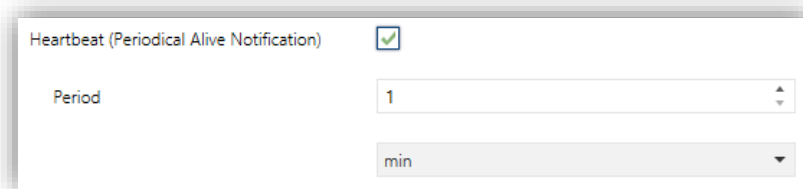


Figure 2. Heartbeat.

Note: the first sending after download or bus failure takes place with a delay of up to 255 seconds, to prevent bus overload. The following sendings match the period set.

- **Device Recovery Objects (Send 0 and 1)** [\[disabled / enabled\]](#): this parameter lets the integrator activate two new communication objects (“**[Heartbeat] Device Recovery**”), which will be sent to the KNX bus with values “0” and “1” respectively whenever the device begins operation (for example, after a bus power failure). It is possible to parameterise a certain **delay** [\[0...255\]](#) to this sending.



Figure 3. Device Recovery Objects.

¹ The default values of each parameter will be highlighted in blue in this document, as follows: [\[default / rest of options\]](#).

Note: After download or bus failure, the sending takes place with a delay of up to 6,35 seconds plus the parameterised delay, to prevent bus overload.

- **Scenes after download** [[Configured by parameter](#) / [Keep scenes after download](#)]: assign the options keep scenes saved or configured by parameter, in order to update scenes only on the first download of the device version or to delete scenes saved after the download of the device version.

Regardless of the above parameters, the following objects are available by default:

- “[AC] On/Off” and “[AC] On/Off (Status)”: allow switching on (value “1”) and off (value “0”) the A/C unit or reading the current status, respectively.
- “[AC] Temperature Setpoint” and “[AC] Temperature Setpoint (Status)”: allow setting the desired temperature setpoint or reading the current value, respectively. See section 2.2.1 for further options.
- “[AC] Mode” and “[AC] Mode (Status)”: allow setting the desired operation mode (either Automatic, Heating, Cooling, Fan or Dry) or reading the current mode, respectively. See section 2.2.1 for further options.
- “[AC] Fan: Percentage Control” and “[AC] Fan: Percentage Control (Status)”: allow establishing desired fan speed or reading the current fan speed, respectively. See section 2.2.1.
- Several **error objects**. See section 2.2.4.
- “[AC] Operation Mode Management (Status)”: This object is only available on VRV Units. It indicates whether the KLIC-DI v2 will control a *master or slave of mode* unit in case several machines are connected to the same outside machine. See section 2.2.1.

2.2 A/C GATEWAY

2.2.1 CONFIGURATION

KLIC-DI v2 allows controlling and monitoring an air-conditioning unit in the same way it would be through the wired remote control it is provided with.

Through the KNX bus, KLIC-DI v2 can be sent orders to control the following basic functions of the air conditioning unit:

- **On/Off** switch of the air-conditioning unit.
- **Operation mode:** automatic, heating, cooling, fan and dry.
- **Temperature setpoint**, which can be modified within a 16 – 32 °C range.
- **Fan speed:** 2, 3 or 5 levels, depending on the model of the A/C unit. It also has the possibility to enable automatic speed if this is available on the indoor unit.
- **Control of flaps (or vanes) positioning:** direct positioning or swing movement of flaps, depending on the A/C unit.

Moreover, KLIC-DI v2 allows configuring several advanced functions:


- **Remote control configuration:** which allows establishing the type of master-slave control desired to KLIC-DI v2.
- **Indoor unit model:** allows to select the indoor unit model between VRV and Sky Air.
- **Reference temperature:** which allows supervising reference temperature that it is taken into account by A/C unit for control temperature. This temperature can be the internal temperature of A/C unit or an external reference temperature, provided by a temperature probe.
- **Filter:** enables to know the filter status of the A/C Unit and reset it
- **Setpoint limits:** to restrict the range for the temperature setpoint.

- **Automatic off**, which allows an automatic and temporary switch-off of the unit (after a pre-established delay, if desired) when the communication object associated to this function is triggered due to a certain event.
- **Initial configuration**, which allows establishing the desired initial parameters for the state of the A/C unit after programming or restarting the device.
- **Scenes**, which allows defining predefined climate control environments, which can be sent or saved by the reception of scene orders from the KNX bus.
- **Operation time** provides in hours and/or seconds the A/C unit operating time.

These functionalities imply changes in the state of the A/C unit, which therefore notifies KLIC-DI v2 periodically about the current state. When KLIC-DI v2 is notified about a change, it updates the **status objects** and sends them to the KNX bus. In addition, KLIC-DI v2 provides an **error management** function (see section 2.2.4), which allows sending messages to the KNX bus in case the A/C unit reports any errors.

ETS PARAMETRIZATION

The Configuration window under A/C Gateway provides the following parameters:

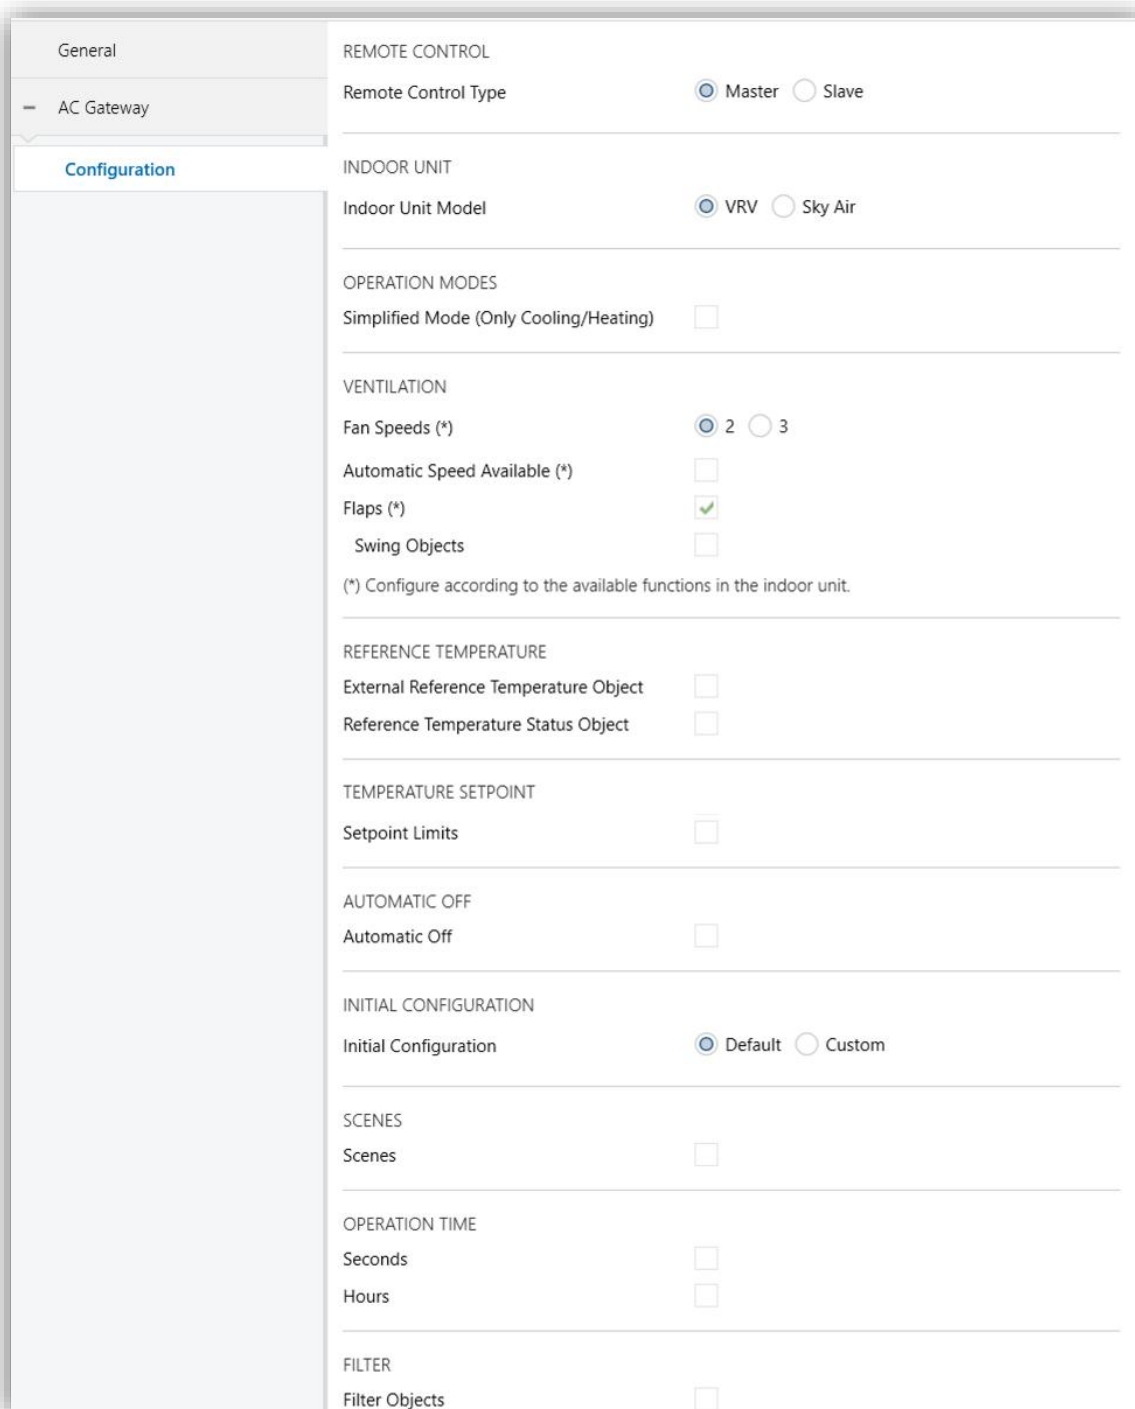

General	REMOTE CONTROL
AC Gateway	Remote Control Type: ☒ Master ☐ Slave
Configuration	INDOOR UNIT
	Indoor Unit Model: ☒ VRV ☐ Sky Air
	OPERATION MODES
	Simplified Mode (Only Cooling/Heating): ☐
	VENTILATION
	Fan Speeds (*): ☒ 2 ☐ 3
	Automatic Speed Available (*): ☐
	Flaps (*): ☒
	Swing Objects: ☐
	(*) Configure according to the available functions in the indoor unit.
	REFERENCE TEMPERATURE
	External Reference Temperature Object: ☐
	Reference Temperature Status Object: ☐
	TEMPERATURE SETPOINT
	Setpoint Limits: ☐
	AUTOMATIC OFF
	Automatic Off: ☐
	INITIAL CONFIGURATION
	Initial Configuration: ☒ Default ☐ Custom
	SCENES
	Scenes: ☐
	OPERATION TIME
	Seconds: ☐
	Hours: ☐
	FILTER
	Filter Objects: ☐

Figure 4. A/C Gateway. Configuration.

2.2.1.1 REMOTE CONTROL



Figure 5. A/C Gateway. Configuration. Remote control.

- **Remote control type** [[Master](#) / [Slave](#)]: configures the control type of KLIC-DI v2.

The **master** control type will correspond to the device which directly communicates with the machine. It will also be in charge of retransmitting the instructions to the **slave** control, if any. This configuration will still permit controlling the machine from the slave control.

This feature allows connecting to the same installation both the KLIC-DI v2 interface and the wired remote control of the A/C unit.

Important:

- *In case of having KLIC-DI v2 and the wired remote control operating together, please, make sure that the control type of both devices is not the same (necessarily one of them must be master and the other slave).*
- *In the case of controlling **units with R32 refrigerant**, it is mandatory to have a **Madoka as master of the installation** and, therefore, the KLIC-DI v2 must be configured as a slave.*

Notes:

- *Switching the wired control between the slave and master modes requires interrupting its power supply in order to make the wired control re-initialise under the new mode.*
- *If the power supply of the wired control fails, it may be necessary to disconnect and reconnect the bus voltage of the device after the power supply has been restored for the configuration between the wired control unit and the KLIC-DI v2 to be successful (especially if KLIC-DI v2 has been configured as master and the wired control as slave).*

2.2.1.2 INDOOR UNIT



Figure 6. A/C Gateway. Configuration. Indoor unit.

- **Indoor unit model** [[VRV](#) / [Sky Air](#)]: KLIC-DI v2 must be configured according to the indoor unit model which will be controlled.

In case of selecting “[VRV](#)” as the indoor model unit, the 1-Byte object “[**AC**] **Operation Mode Management (Status)**” is enabled. This object enables to know if an indoor unit is configured as master or as a slave of mode.

The concept of the **Master Unit** is derived from the possibility of having several indoor A/C units within the same facility, all of them connected to a single outdoor unit. Unless there is a BS box installed, there may be only one main mode active at any time, and therefore a single internal unit may work as a master unit, being the only one able of switching the active mode. The remaining indoor units (and their respective master or slave controls) will act as **slave units**, thus will only have certain modes available, depending on the currently active main mode.

Table 1 shows the different modes that can be selected from the device depending on whether it is controlling a master unit or as a slave unit. Note that in case of acting as a slave unit, the available modes will depend on the mode currently under selection by the master of mode.

Modes available for selection									
Master Unit	Cool			Heat		Fan	Dry		
Slave Unit	Cool	Fan	Dry	Heat	Fan	Fan	Cool	Fan	Dry

Table 1. Configurable modes from a master of mode and from a slave of mode.

If KLIC-DI v2, which controls a slave mode unit, changes to a different mode from allowed modes (according to master unit main mode), the mode of master unit will be established.

For example, if master unit is operating in Heat mode, the allowed modes in a slave unit will be Heat and Fan, while disallowed modes will be Cool and Dry. Thus, if KLIC-DI v2, which controls a slave mode unit, changes to Dry or Cool

mode (disallowed modes), through KNX bus Heat mode will be received. Conversely, if the slave unit changes to Fan or Heat mode, then there will be established in this unit and these statuses will be received through KNX bus.

Please, note that simplified mode functionality will not be available with a configuration of a slave mode unit (“**[AC] Simplified Mode**”), due to it would not be useful.

Notes: *If an installation with multiply indoor A/C units connected to a single outdoor unit has a BS box, all units can change its mode as master unit. Therefore, in case of using a BS box, all KLIC-DI v2 which control indoor unit will show its “operation mode management” as master units.*

2.2.1.3 OPERATION MODES

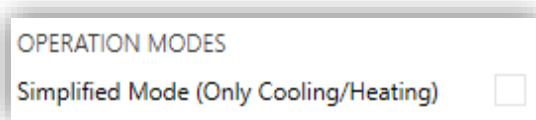


Figure 7. A/C Gateway. Configuration. Operation modes.

KLIC-DI v2 allows controlling the A/C unit operating mode through the following objects, available by default:

- “[AC] Mode”: 1-Byte object which allows selecting the A/C unit operation mode. There will be only taken in account values that are appropriated with some of available modes in Daikin units, which are represented in Table 2.
- “[AC] Mode (status)”: 1-Byte object which allows knowing the A/C unit operating mode status.

Object Value	A/C unit mode
0	Auto
1	Heating
3	Cooling
9	Fan only
14	Dry

Table 2. A/C unit operating modes.

Additionally, a simplified mode can be configured to select Cooling and Heating mode.

- **Simplified Mode (Only Cooling/Heating)** [[disabled](#) / [enabled](#)]: in addition to the “Mode” and “Mode (Status)” 1-Byte objects, available by default, it is possible to commute and to verify the current operation mode through the following 1-Bit objects, which get enabled after activating this parameter:
 - **“Simplified Mode”**, which allows switching to the Cooling mode by sending it a “0” and to the Heating mode by sending it a “1”.
 - **“Simplified Mode (Status)”**, which will send a value of “0” when the mode switches to Cooling or Dry, or a value of “1” when it switches to Heating. The Fan mode is not reflected in the value of this object. In Auto mode the value will be actualized depending on the current mode operating: Auto-Cooling (“0”) or Auto-Heating (“1”).

Note: *In an installation with both KLIC-DI v2 and wired control remote, and mode changes (Auto-Cool to Auto-Heat or vice versa) are performed from both controls during automatic mode, that the setpoint/ventilation/flame states are updated to those of the last time the mode was entered is possible.*

2.2.1.4 VENTILATION

VENTILATION

Fan Speeds (*) ☒ 2 ☐ 3

Automatic Speed Available (*) ☐

Flaps (*) ☒

Swing Objects ☐

(*) Configure according to the available functions in the indoor unit.

Figure 8. A/C Gateway. Configuration. Ventilation.

- **Fan Speeds** [[2](#) / [3](#) / [5](#)]: specified the number of the fan levels distinguished by A/C unit.
- **Individual Object for Automatic Speed** [[disabled](#) / [enabled](#)]: 1-Bit objects “[AC] Speed: Automatic” and “[AC] Speed: Automatic (Status)” activate automatic speed and informs the currently state, respectively. Moreover, the polarity of this parameter can be selected:

- **Automatic Speed Object Polarity** [0 = Automatic On; 1 = Automatic Off / 0 = Automatic Off; 1 = Automatic On]: sets the polarity of the above objects.

KLIC-DI v2 allows the sending of fan speed change orders to the A/C unit to switch the ventilation speed along the available levels. To that end, KLIC-DI v2 provides a **percentage** control through the objects “[AC] Fan: percentage control” y “[AC] Fan: percentage control (Status)”, available by default.

Important: fan speed must be configured according to the available functions in the A/C unit. If it is not set correctly, it may cause the machine to work incorrectly.

Not all VRV units have an automatic fan speed mode. On units without this function, the manual mode acts as the maximum fan speed. This means that, even if the user selects a specific speed, the unit will automatically adjust the speed within that limit, reducing it once the setpoint temperature has been reached.

Certain VRV models do not allow setpoint temperatures higher than 23°C or lower than 18°C. If the KLIC sends a temperature value that is outside this range, the unit will adjust it to the corresponding limit value, but the KLIC will continue to display the set value.

Table 3 and Table 4 reflect the percentage values that refer to several ventilation levels:

Control Value	Status Value	Level sent to the A/C unit
0 - 50.20%	50.20%	1 (minimum)
50.59 - 100%	100%	2 (maximum)

Table 3. Fan Speed for 2 levels of ventilation.

Control Value	Status Value	Level sent to the A/C unit
0 - 33.33%	33.33%	1 (minimum)
33.73 - 66.67%	66.67%	2
67.06 - 100%	100%	3 (maximum)

Table 4. Fan Speed for 3 levels of ventilation.

Control Value	Status Value	Level sent to the A/C unit
0 - 20%	20%	1 (minimum)
20.40 - 40%	40%	2
40.60 - 60%	60%	3
60.40 - 80%	80%	4
80.40 - 100%	100%	5 (maximum)

Table 5. Fan Speed for 5 levels of ventilation.

Note: In dry mode, A/C unit sets fan speed in automatic mode. Due to this fact, the fan speed control orders will be ignored during this mode and will be taken into account when Dry mode expires.

In addition, the value "0%" of the "[AC] Flaps: Percentage Control" and "[AC] Flaps: Percentage Control (Status)" objects, will be reserved for triggering such function and reporting whether it is currently active, respectively.

- **Flaps** [disabled / enabled]. Flaps function allows sending the A/C unit orders to switch the position of the flaps (or vanes), in case of being available in the unit.

Important: this parameter must be configured according to the available functions in the A/C unit, in order not to cause an abnormal control or behaviour of the air machine. Note that, if this parameter is not configured properly, the communication with a slave remote wired control will not be possible, in case of having it in the installation.

When flaps are enabled, "[AC] Flaps: Percentage Control" and "[AC] Flaps: Percentage Control (Status)" 1-byte objects are available, which allow sending the A/C unit orders to switch the position of the flaps or activating the swing function and supervising flaps status. Furthermore, it will appear a new parameter called *Movement objects*.

Control values	Status value	Position sent to the Unit
0%	0%	Swing
1-20%	20%	Position 1
21-40%	40%	Position 2
41-60%	60%	Position 3
61-80%	80%	Position 4
81-100%	100%	Position 5

Table 6. Flaps Control

Swing objects [[disabled](#) / [enabled](#)]: enables 1-Bit objects “[AC] Flaps: Swing” and “[AC] Flaps: Swing (Status)” to activate or not swing movement and, also, consulting its status.

The parameter **Swing object polarity** [*0 = Swing On; 1 = Swing Off* / [0 = Swing Off; 1 = Swing On](#)] is available to set the polarity of the enabled objects.

Note: on certain A/C unit models, positions 3-5 may not be available under the Cool mode, as a measure to prevent that a cold air flow is outputted directly to particular points of the room where people are supposed to stand. Analogously, positions 1 and 2 may not be permitted by the A/C unit under the Heat mode, to prevent hot air accumulation on the top of the room.

2.2.1.5 REFERENCE TEMPERATURE

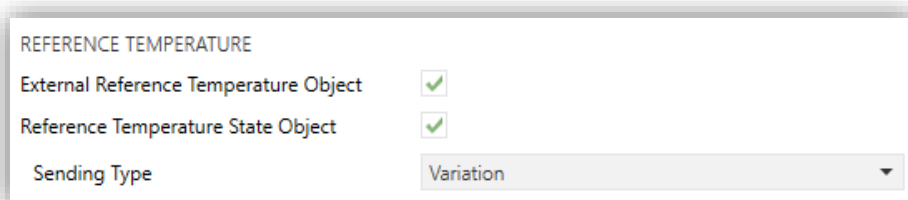


Figure 9. A/C Gateway. Configuration. Reference temperature (master control).

- **External reference temperature object** [[disabled](#) / [enabled](#)]: enables a 2-Byte object “[AC] External Reference Temperature” which will receive the temperature values provided by an external temperature probe and these values will be employed by the A/C unit to control the temperature (instead of employing its internal values). If during 3 minutes, no temperature values are received, the control will be done with the internal sensor of the machine as if this option had not been enabled. If a new external temperature value is received, the control will be again executed by using this external value. The values allowed to be received in this object are included in [0-99] °C (if different values are received, they will be ignored).

Note: external reference temperature object only will be available if KLIC-DI v2 is configured as master control.

Depending on how KLIC-DI v2 is configured, the status of the reference temperature will be shown. If KLIC-DI v2 is configured as master control, the following object can be selected:

- **Reference temperature state object** [[disabled](#) / [enabled](#)]: enables a 2-Byte object “[AC] Reference Temperature (Status)” which informs of the temperature that the A/C Unit use as reference to do the temperature control (internal or external).

On the other hand, if KLIC-DI v2 is configured as slave control, the following objects can be selected:

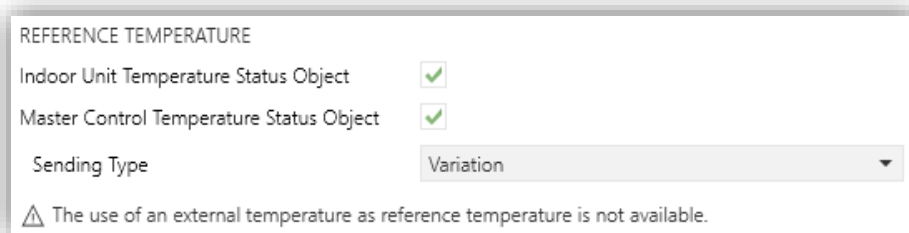


Figure 10. A/C Gateway. Configuration. Reference temperature (slave control).

- **Indoor Unit Temperature Status Object** [[disabled](#) / [enabled](#)]: enables a 2-Byte object “[AC] Indoor Unit Temperature (Status)” which provides the value of the temperature measured by the A/C Unit.
- **Master Control Temperature Status Object** [[disabled](#) / [enabled](#)]: enables a 2-Byte object “[AC] Master Control Temperature (Status)” which provides the value of the temperature measured by the master control probe used as reference.

Note: *If the master control does not send any reference temperature, the temperature status object of the master control will send the temperature value of the indoor unit.*

- **Sending type:** defines the mode in which the reference temperature will be sent:
 - [[Variation](#)]: reference temperature will be sent when there is almost a variation of 0.1°C, and additionally, 30 seconds have passed from the previous sending to avoid KNX bus saturation.
 - [[Periodic](#)]: reference temperature will be sent periodically according to the configured sending **period** [[30...3600](#)][s] / [[1...15...1440](#)][min] / [[1...24](#)][h].


- **[Periodic + Variation]**: consists of the combination of the two previous options, the sending will be made by variation and periodically.

Note: *Daikin indoor units have three different ways to be programmed in regards with its reference temperature. This configuration must be done by a Daikin qualified technician or installer using wired remote control.*

- 1) *Use of external and internal reference temperature: the indoor unit uses its own return temperature when there is a big difference between the ambient temperature and the setpoint temperature. The ambient temperature will be used from the Master device (remote controller, or KLIC-DI v2 device) when this difference is small.*
- 2) *Use of internal reference temperature: the indoor unit always uses its own return temperature.*
- 3) *Use of external reference temperature: the indoor unit only uses the ambient temperature from the Master device (Daikin wired remote control or KLIC-DI v2 device).*

This functionality must be configured in the unit according with the KLIC-DI v2 parametrization in order to do an effective temperature control. For example, a wrong configuration would be one in where indoor unit employs one of the options that uses external reference temperature and configuring a master KLIC-DI v2 without external reference temperature to control it.

2.2.1.6 TEMPERATURE SETPOINT

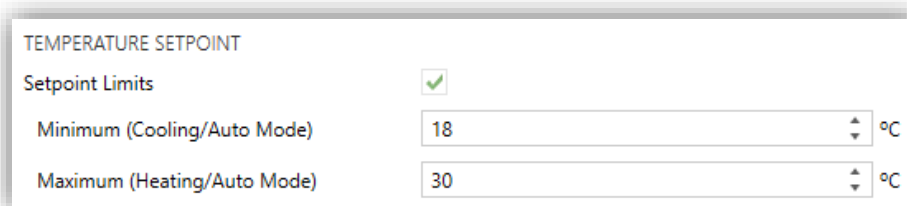

TEMPERATURE SETPOINT	
Setpoint Limits	☒
Minimum (Cooling/Auto Mode)	18 °C
Maximum (Heating/Auto Mode)	30 °C

Figure 11. A/C Gateway. Configuration. Temperature setpoint.

The following objects to control and supervise setpoint temperature will be available by default:

- **“[AC] Temperature Setpoint”**: 2-Byte object to select decimal temperature values that belong to the range [16°-32°].

- “[AC] Temperature Setpoint (Status)”: 2-Byte object that provides the Temperature setpoint status.

Note: *The setpoint value will be rounded to whole degrees or half-degree increments, for example 20°, 20.5° or 21°. A value of X.Y will be rounded to X.0 if $[Y < 25]$, to X.5 if $[25 \leq Y < 75]$ or to $(X+1).0$ if $[Y \geq 75]$.*

Status object will be updated to the last setpoint temperature value received by the A/C unit after a complete communication cycle and will be sent to KNX bus every time that its value changes.

Setpoint limits can be configured by parameter:

- **Setpoint Limits** [[disabled](#) / [enabled](#)]: allows restricting the range of the temperature setpoint (from below in the Cooling and Auto modes and from above in the Heating and Auto modes), provided that the limits are still within the predefined limits of the A/C unit. When KLIC-DI v2 receives an order to send the A/C unit a setpoint which is greater (or lower) than the configured limits, it will actually send the limit value.
 - **Minimum (Cooling / Auto Mode)** [[16...18...32](#)] °C: sets the lower limit.
 - **Maximum (Heating / Auto Mode)** [[16...30...32](#)] °C: sets the upper limit.

Once these limits are enabled, several objects to modify them at run time will be available. The values of these objects will be restricted to an interval which is defined by the absolute limits established by the A/C unit (16°C to 32°C).

- “[AC] Temperature Setpoint: Lower Limit”: 2-Byte object that allows changing the lower limit at run time.
- “[AC] Temperature Setpoint: Lower Limit (Status)”: 2-Byte object with the lower limit current value.
- “[AC] Temperature Setpoint: Upper Limit”: 2-Byte object that allows changing the upper limit at run time.
- “[AC] Temperature Setpoint: Upper Limit (Status)”: 2-Byte object with the upper limit current value.

Notes:

- If $[Minimum] \geq [Maximum]$, limits will not be taken in account in Auto mode due to the incongruity. In this case, default values will be used.
- These parameters only can be set as integer values in ETS. However, at run time the associated objects allow decimal values.
- The A/C unit set a fixed temperature setpoint in Fan and Dry mode, this is the reason why KLIC-DI v2 will not send the setpoint value to A/C unit, however the value will be saved in order to be sent when these modes expires.
- The setpoint limits set by the A/C unit on each operating mode are indicated in Table , however, these limits can be more restrictive changing the configuration with the wired remote control:

Mode	Temperature Setpoint
Auto	[16°-32°]
Cooling	[16°-32°]
Heating	[16°-32°]
Fan	Not available
Dry	Not available

Table 7. Interior setpoint limits of A/C unit

2.2.1.7 AUTOMATIC OFF

AUTOMATIC OFF

Automatic Off ☒

Automatic Off Object Polarity ☐ 0 = Activate; 1 = Deactivate
☒ 0 = Deactivate; 1 = Activate

Automatic Off Delay s

Figure 12. A/C Gateway. Configuration. Automatic off.

- **Automatic Off** [disabled / enabled]: enables the “[AC] Automatic Off” binary object, which lets performing a temporary switch-off of the A/C unit by sending it a value of “1” and a later switch-on by sending it a value of “0”. This object will be typically linked to a window sensor or a similar event trigger. Automatic off will be also active if the unit is previously in off state, so, the unit will not be able of being on until this situation finishes.

During the temporary switch-off state, KLIC-DI v2 will still monitor any control orders being received (setpoint, fan speed, etc.), so they can be applied once it leaves such state.

- **Automatic Off Object Polarity** [*0 = Activate; 1 = Deactivate* / *0 = Deactivate; 1 = Activate*]: sets the polarity of the above object.
- **Automatic Off Delay** [*1...60...3600*] s: sets the time KLIC-DI v2 waits before switching the A/C machine off. Any switch-off order received during the delay will abort the time count.

Note: *switch-on orders sent to the A/C unit from a Daikin control have a higher priority than the Auto Off mode.*

2.2.1.8 INITIAL CONFIGURATION

 


Figure 13. A/C Gateway. Configuration. Initial configuration.

- **Initial Configuration:** allows setting the desired initial state that KLIC-DI v2 will send the A/C unit after programming or restarting the device:
 - [*Default*]: the initial state will be the last one KLIC-DI v2 is aware of.
 - [*Custom*]: see section 2.2.2

2.2.1.9 SCENES



Figure 14. A/C Gateway. Configuration. Scenes.

- **Scenes** [*disabled* / *enabled*]: allows setting up different scenes (up to 5), consisting each of them in a set of orders to be sent to the A/C unit upon the reception of scene trigger values through the KNX bus. See section 2.2.3.

2.2.1.10 OPERATING TIME

Figure 15. A/C Gateway. Configuration. Operating Time.

The operating time of the A/A machine in hours and/or seconds can be known.

The available parameters in ETS are:

- **Seconds** [*disabled* / *enabled*]: enables the 2-Byte object “[AC] Operating time (s)”. This object can be read and overwritten during executing time.
- **Hours** [*disabled* / *enabled*]: enables the 4-Byte object “[AC] Operating time (h)”. This object can be read and overwritten during executing time.
- **Initial Operation Time**, two options are available:
 - [*Keep current value*]: keeps the previous value.
 - [*Set new value*]: establishes an initial operating time **value** *[[0...3600][s] / [0...65535][h]]*.
- **Periodic Sending** *[[0...3600][s] / [0...65535][min/h]]*: operating time retransmission period. If set to 0 the periodic send is disabled.

When operating time object reaches its maximum value (65535h), it will be sent through KNX bus (in spite of the fact that the periodic sending has not been configured) and it will keep this value until the user reset it.

2.2.1.11 FILTER

Figure 16. A/C Gateway. Configuration. Filter

- **Filter Objects** [[disabled](#) / [enabled](#)]: enables 1-Bit objects “[AC] Filter (Status)” and “[AC] Filter: Reset”. “[AC] Filter (Status)” will send to the bus KNX the value “1” to indicate that the filter needs to be cleaned. Once the filter is cleaned, the alarm has to be reset through the object “[AC] Filter: Reset” sending the value “0” or “1”.


2.2.2 INITIAL CONFIGURATION

The custom initial configuration allows setting the desired status that KLIC-DI v2 will send the A/C unit after downloading or restarting the device. This status is defined in terms of on/off, mode, fan speed, flaps position and temperature setpoint.

In addition, it is possible to activate an initial sending of this status to the KNX bus.

ETS PARAMETRISATION

After selecting “[Custom](#)” for the **Initial Configuration** option under the Configuration tab (see section 2.2.1), a new tab named **Initial Configuration** is displayed with the following parameters:

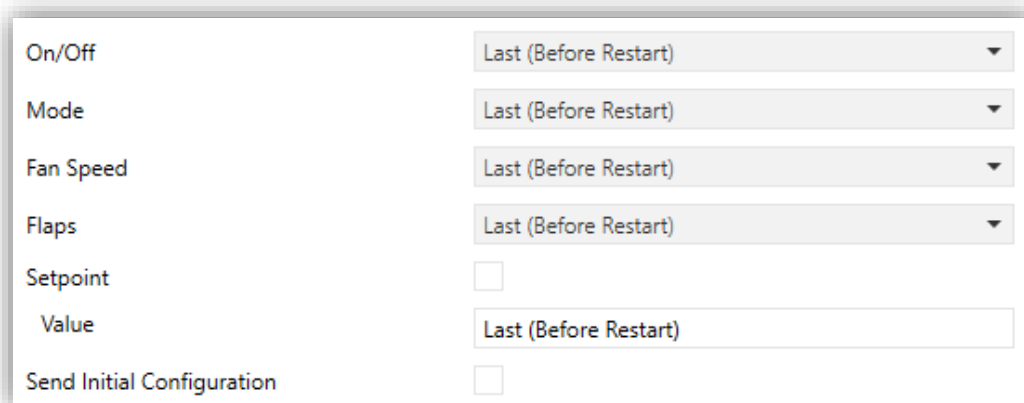

On/Off	Last (Before Restart)
Mode	Last (Before Restart)
Fan Speed	Last (Before Restart)
Flaps	Last (Before Restart)
Setpoint	☐
Value	Last (Before Restart)
Send Initial Configuration	☐

Figure 17. A/C Gateway. Initial configuration.

- **On/Off** [[Last \(before restart\)](#) / [On](#) / [Off](#)].
- **Mode** [[Last \(before restart\)](#) / [Automatic](#) / [Heating](#) / [Cooling](#) / [Fan](#) / [Dry](#)].

Note: if fan mode is selected, setpoint temperature and automatic fan speed cannot be selected.

- **Fan speed** [[Last \(before restart\)](#) / [1](#) / [2](#) / [3](#) / [4](#) / [5](#) / [Automatic](#)]. The number of speeds will depend on those selected in the **Fan speeds** parameter and the

possibility to select "Automatic" will be available as long as this option has been enabled in the AC Gateway **Configuration** tab (see section 2.2.1, **ventilation**)

- **Flaps** [[Not Available](#)]. The following options will only be available if you enable **Flaps** in the AC Gateway **Configuration** tab (see section 2.2.1, **ventilation**):
[\[Last \(before restart\) / Swing / 1 / 2 / 3 / 4 / 5\]](#).

- **Setpoint** [[disabled](#) / [enabled](#)]:

- **Value.** Depending on the value of the previous parameter, it will be shown:
 - [[Last \(before restart\)](#)]: the value of the setpoint temperature will be kept. When **Setpoint** is disabled.
 - [[16...25...32](#)] °C When Setpoint is enabled.

Note: *this initial setpoint value may be modified by the setpoint limits during runtime.*

- **Send initial configuration** [[disabled](#) / [enabled](#)]: If enabled, the status objects will be sent to the KNX bus after applying the parametrized **delay** [0...3600], in seconds.

Notes:

- *Even if this option is not enabled, the status objects may be sent to the KNX bus if the initial configuration differs from the current status of the A/C machine.*
- *The delay parametrized in initial configuration sending is approximate, due to it starts to be counted when the communication between KLIC-DI v2 and A/C unit is confirmed.*

2.2.3 SCENES

The Scenes function allows defining a set of statuses (in terms of On/Off, mode, fan speed, etc.) that KLIC-DI v2 will send to the A/C unit whenever it receives the corresponding scene values from the KNX bus.

ETS PARAMETRISATION

After enabling this function (see section 2.2.1), a new tab named **Scenes** will be incorporated to the tab tree. It allows setting up different scenes (up to 5), consisting each of them in a set of orders to be sent to the A/C unit upon the reception, through the KNX bus by means of the “[AC] Scenes” object, a value for scene activation [1...64]. If, on the other hand, a value is received to store a scene [128...191], the current values will be saved. The storing does not apply to the parameters with values No change or Not available.

Scene	Enabled	Scene Number	On/Off	Mode	Fan Speed	Flaps	Setpoint	Value
Scene 1	☒	1	No change	No Change	No Change	No Change	☐	No Change
Scene 2	☐							
Scene 3	☐							
Scene 4	☐							
Scene 5	☐							

Figure 18. A/C Gateway. Scenes.

For every enabled scene, the parameters that should be configured are:

- **Scene number** [1...64]: sets the scene number that, upon reception through the object “[AC] Scene” (decreased by one), will trigger the corresponding orders, as defined next:
 - **On/Off** [No change / On / Off]. If "No change" is selected, the machine will retain the last state before scene reception.
 - **Mode** [Last (before restart) / Automatic / Heating / Cooling / Fan / Dry].

Note: if fan mode is selected, setpoint temperature and automatic fan speed cannot be selected.

- **Fan speed** [[No change](#) / 1 / 2 / 3 / 4 / 5 / Automatic]. The number of speeds will depend on those selected in the **Fan speeds** parameter and the possibility to select "Automatic" will be available as long as this option has been enabled in the AC Gateway **Configuration** tab (see section 2.2.1, **ventilation**)
- **Flaps** [[Not Available](#)]. The following options will only be available if you enable **Flaps** in the AC Gateway **Configuration** tab (see section 2.2.1, **ventilation**): [[No change](#) / [Swing](#) / 1 / 2 / 3 / 4 / 5].
- **Setpoint** [[disabled](#) / [enabled](#)]:
 - **Value.** Depending on the value of the previous parameter, it will be shown:
 - [[No change](#)]: the value of the setpoint temperature will be kept. When **Setpoint** is disabled.
 - [[16...25...32](#)] °C When **Setpoint** is enabled.

Note: *this setpoint value may be modified by the setpoint limits during runtime.*

2.2.4 ERROR HANDLING

KLIC-DI v2 can manage two types of error:

- **Communication or internal errors:** errors in the communication process between KLIC-DI v2 and the A/C unit:

- **Communication error:** KLIC-DI v2 is not able to establish communication with the A/C machine.

There is a LED notification, by which the LED on the device will light green when communication error is active.

- **Wrong acknowledgement:** KLIC-DI v2 received an unexpected response after sending a request to the A/C unit.

There is a LED notification, by which the LED on the device will blink every 0.5 seconds in green and stay off for other 3 seconds when wrong acknowledgement error is active.

- **Errors in the A/C unit:** errors reported by the A/C unit itself. KLIC-DI v2 can notify the KNX bus about the reported error code, although referring to the specific documentation of the A/C machine is advisable in order to obtain further information.

ETS PARAMETRISATION

The error handling function does not entail any parameter configuration. The following objects are available by default:

- Internal error objects:
 - “[AC] Internal Error: Communication”: 1-Bit object to indicate that KLIC-DI v2 is unable to access to the internal communication port.
 - “[AC] Internal Error: Wrong acknowledgement”: 1-Bit object to indicate that an unexpected response or a response with transmission errors has been received.

In case any of the above errors is detected, the corresponding object will be sent periodically (with a value of “1”) to the KNX bus. Once the error is over, it the object will be sent (once) with a value of “0”.

In case of being in an internal error situation, control orders will be ignored by KLIC-DI v2 and the status will be the previous to the error activation.

Note: *If an internal communication error occurs, we recommend following these steps:*

- 1) *Check that the KLIC-DI is correctly connected.*
- 2) *Check that the control settings are correct. Ensure that neither the device nor the wired remote control is configured as a slave or a master.*
- 3) *If the installation includes a wired remote control, check whether it indicates any errors.*
- 4) *If the internal error persists, contact support.*

- Errors in the A/C machine:
 - “[AC] A/C unit Error: Active Error”: 1-Bit object which indicate that there is an error in the A/C unit.

- “[AC] A/C unit Error: Error Code”: 14-Byte object that supplies the error code.

In case the A/C unit reports an error, the former object will be sent with value of “1”, while the latter will report the corresponding error code. Once the error is over, both binary and 14-byte objects will send a value of “0”. Please, refer to the user manual of the A/C unit for details about the error codes.

2.3 INPUTS

KLIC-DI v2 incorporates **two analogue / digital inputs**, each one has three possible configurations, which are outlined below.

2.3.1 BINARY INPUT

Configuration for the connection of a pushbutton, a switch/sensor or a pulse counter.

Please refer to the “**Binary Inputs**” user manual, available under the product section at www.zennio.com.

2.3.2 TEMPERATURE PROBE

Configuration for connecting a 6.8k or 10k Ohms Zennio temperature probe, or a custom NTC probe.

Please refer to the “**Temperature Probe**” user manual, available under the product section at www.zennio.com.

2.3.3 MOTION DETECTOR

Configuration for the connection of a motion detector. It is possible to connect motion detectors from Zennio.

Please refer to the “**Motion Detector**” user manual, available under the product section at www.zennio.com, for detailed information about the functionality and the configuration of the related parameters.

2.4 LOGIC FUNCTIONS

This module makes it possible to perform numeric and binary operations with incoming values received from the KNX bus, and to send the results through other communication objects specifically enabled for this purpose.

KLIC-DI v2 can implement **up to 10 different and independent functions**, each of them entirely customisable and consisting in **up to 4 consecutive operations each**.

The execution of each function can depend on a configurable **condition**, which will be evaluated every time the function is **triggered** through specific, parameterisable communication objects. The result after executing the operations of the function can also be evaluated according to certain **conditions** and afterwards sent (or not) to the KNX bus, which can be done every time the function is executed, periodically or only when the result differs from the last one.

Please refer to the “**Logic Functions**” user manual (available in the KLIC-DI v2 product section at the Zennio homepage, www.zennio.com) for detailed information about the functionality and the configuration of the related parameters.

ANNEX I. COMMUNICATION OBJECTS

- “**Functional range**” shows the values that, with independence of any other values permitted by the bus according to the object size, may be of any use or have a particular meaning because of the specifications or restrictions from both the KNX standard or the application program itself.

Number	Size	I/O	Flags	Data type (DPT)	Functional Range	Name	Function
1	1 Byte	I/O	C R W T U	DPT_SceneControl	0-63; 128-191	[AC] Scene	0 - 63 (Execute 1 - 64); 128 - 191 (Save 1 - 64)
2	1 Bit	I	C - W - -	DPT_Switch	0/1	[AC] On/Off	0 = Off; 1 = On
3	1 Bit	O	C R - T -	DPT_Switch	0/1	[AC] On/Off (Status)	0 = Off; 1 = On
4	2 Bytes	I	C - W - -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Temperature Setpoint	[16 ... 32] °C
5	2 Bytes	O	C R - T -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Temperature Setpoint (Status)	[16 ... 32] °C
6	2 Bytes	I	C - W - -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Temperature Setpoint: Lower Limit	[16 ... 32] °C
7	2 Bytes	O	C R - T -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Temperature Setpoint: Lower Limit (Status)	[16 ... 32] °C
8	2 Bytes	I	C - W - -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Temperature Setpoint: Upper Limit	[16 ... 32] °C
9	2 Bytes	O	C R - T -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Temperature Setpoint: Upper Limit (Status)	[16 ... 32] °C
10	1 Byte	I	C - W - -	DPT_HVACContrMode	0=Auto 1=Heat 3=Cool 9=Fan 14=Dry	[AC] Mode	0 = Automatic; 1 = Heating; 3 = Cooling; 9 = Fan; 14 = Dry
11	1 Byte	O	C R - T -	DPT_HVACContrMode	0=Auto 1=Heat 3=Cool 9=Fan 14=Dry	[AC] Mode (Status)	0 = Automatic; 1 = Heating; 3 = Cooling; 9 = Fan; 14 = Dry
12	1 Bit	I	C - W - -	DPT_Heat_Cool	0/1	[AC] Simplified Mode	0 = Cooling; 1 = Heating
13	1 Bit	O	C R - T -	DPT_Heat_Cool	0/1	[AC] Simplified Mode (Status)	0 = Cooling; 1 = Heating
14	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control	[0...50.20] % = S1; [50.59...100] % = S2
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control	[0...33.33] % = S1; [33.73...66.67] % = S2; [67.06...100] % = S3
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control	0 % = Automatic; [0.40...50.20] % = S1; [50.59...100] % = S2
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control	0 % = Automatic; [0.40...33.33] % = S1; [33.73...66.67] % = S2; [67.06...100] % = S3

	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control	[0...20] % = S1; [20.40...40] % = S2; [40.40...60] % = S3; [60.40...80] % = S4; [80.40...100] % = S5
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control	0% = Automatic; [0.40...20] % = S1; [20.40...40] % = S2; [40.40...60] % = S3; [60.40...80] % = S4; [80.40...100] % = S5
15	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control (Status)	50.20 % = S1; 100 % = S2
	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control (Status)	33.33 % = S1; 66.67 % = S2; 100 % = S3
	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control (Status)	0 % = Automatic; 50.20 % = S1; 100 % = S2
	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control (Status)	0 % = Automatic; 33.33 % = S1; 66.67 % = S2; 100 % = S3
	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control (Status)	20 % = S1; 40 % = S2; 60 % = S3; 80 % = S4; 100 % = S5
	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[AC] Speed: Percentage Control (Status)	0 % = Automatic; 20 % = S1; 40 % = S2; 60 % = S3; 80 % = S4; 100 % = S5
16	1 Bit	I	C - W - -	DPT_Enable	0/1	[AC] Speed: Automatic	0 = Automatic Off (Speed 1); 1 = Automatic On
	1 Bit	I	C - W - -	DPT_Enable	0/1	[AC] Speed: Automatic	0 = Automatic On; 1 = Automatic Off (Speed 1)
17	1 Bit	O	C R - T -	DPT_Enable	0/1	[AC] Speed: Automatic (Status)	0 = Automatic Off; 1 = Automatic On
	1 Bit	O	C R - T -	DPT_Enable	0/1	[AC] Speed: Automatic (Status)	0 = Automatic On; 1 = Automatic Off
18	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[AC] Flaps: Percentage Control	0 % = Swing; [0.39...20] % = P1; [20.39...40] % = P2; [40.39...60] % = P3; [60.39...80] % = P4; [80.39...100] % = P5
19	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[AC] Flaps: Percentage Control (Status)	0 % = Swing; 20 % = P1; 40 % = P2; 60 % = P3; 80 % = P4; 100 % = P5
20	1 Bit	I	C - W - -	DPT_Switch	0/1	[AC] Flaps: Swing	0 = Swing Off; 1 = Swing On
	1 Bit	I	C - W - -	DPT_Switch	0/1	[AC] Flaps: Swing	0 = Swing On; 1 = Swing Off
21	1 Bit	O	C R - T -	DPT_Switch	0/1	[AC] Flaps: Swing (Status)	0 = Swing Off; 1 = Swing On
	1 Bit	O	C R - T -	DPT_Switch	0/1	[AC] Flaps: Swing (Status)	0 = Swing On; 1 = Swing Off
22	2 Bytes	I	C - W - -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] External Reference Temperature	[0 ... 99] °C
23	2 Bytes	O	C R - T -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Reference Temperature (Status)	Effective Control Temperature (°C)
24	2 Bytes	O	C R - T -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Indoor Unit Temperature (Status)	Return temperature measured by the indoor unit
25	2 Bytes	O	C R - T -	DPT_Value_Temp	-273.00° - 670433.28°	[AC] Master Control Temperature (Status)	Temperature measured by the master control probe
26	1 Bit	I	C - W - -	DPT_Switch	0/1	[AC] Automatic Off	0 = Deactivate; 1 = Activate
	1 Bit	I	C - W - -	DPT_Switch	0/1	[AC] Automatic Off	0 = Activate; 1 = Deactivate
27	1 Bit	O	C R - T -	DPT_Switch	0/1	[AC] Automatic Off (Status)	0 = Deactivated; 1 = Activated

	1 Bit	O	CR-T-	DPT_Switch	0/1	[AC] Automatic Off (Status)	0 = Activated; 1 = Deactivated
28	2 Bytes	I	C-W--	DPT_TimePeriodSec	0 - 65535	[AC] Automatic Off: Delay	[0...3600] s (0 = Disabled)
29	4 Bytes	I/O	CRWT-	DPT_LongDeltaTimeSec	-2147483648 - 2147483647	[AC] Operating Time (s)	Operation time in seconds
30	2 Bytes	I/O	CRWT-	DPT_TimePeriodHrs	0 - 65535	[AC] Operating Time (h)	Operation time in hours
31	1 Bit	O	CR-T-	DPT_Alarm	0/1	[AC] Internal Error: Communication	Unable to Set AC Communication
32	1 Bit	O	CR-T-	DPT_Alarm	0/1	[AC] Internal Error: Wrong Acknowledgement	Acknowledgement Received with Errors
33	1 Bit	O	CR-T-	DPT_Alarm	0/1	[AC] AC Unit Error: Active Error	AC Unit Error
34	14 Bytes	O	CR-T-	DPT_String_ASCII		[AC] AC Unit Error: Error Code	See AC Unit Manual
35	1 Byte	O	CR-T-	DPT_MasterSlaveMode		[AC] Operation Mode Management (Status)	1 = Master Unit; 2 = Slave Unit
36	1 Bit	I	C-W--	DPT_Trigger	0/1	[AC] Filter: Reset	Reset Filter Status
37	1 Bit	O	CR-T-	DPT_Bool	0/1	[AC] Filter (Status)	0 = No Alarm; 1 = Alarm
38, 42	2 Bytes	O	CR-T-	DPT_Value_Temp	-273.00° - 670433.28°	[Ix] Current Temperature	Temperature Sensor Value
39, 43	1 Bit	O	CR-T-	DPT_Alarm	0/1	[Ix] Overcooling	0 = No Alarm; 1 = Alarm
40, 44	1 Bit	O	CR-T-	DPT_Alarm	0/1	[Ix] Overheating	0 = No Alarm; 1 = Alarm
41, 45	1 Bit	O	CR-T-	DPT_Alarm	0/1	[Ix] Probe Error	0 = No Alarm; 1 = Alarm
46, 55	1 Bit	I	C-W--	DPT_Enable	0/1	[Ix] Input Lock	0 = Unlock; 1 = Lock
47, 56	1 Bit	O	C--T-	DPT_Switch	0/1	[Ix] [Short Press] 0	Sending of 0
	1 Bit	O	C--T-	DPT_Switch	0/1	[Ix] [Short Press] 1	Sending of 1
	1 Bit	I	C-WT-	DPT_Switch	0/1	[Ix] [Short Press] 0/1 Switching	Switching 0/1
	1 Bit	O	C--T-	DPT_UpDown	0/1	[Ix] [Short Press] Move Up Shutter	Sending of 0 (Up)
	1 Bit	O	C--T-	DPT_UpDown	0/1	[Ix] [Short Press] Move Down Shutter	Sending of 1 (Down)
	1 Bit	I	C-WT-	DPT_UpDown	0/1	[Ix] [Short Press] Move Up/Down Shutter	Switching 0/1 (Up/Down)
	1 Bit	O	C--T-	DPT_Step	0/1	[Ix] [Short Press] Stop/Step Up Shutter	Sending of 0 (Stop/Step Up)
	1 Bit	O	C--T-	DPT_Step	0/1	[Ix] [Short Press] Stop/Step Down Shutter	Sending of 1 (Stop/Step Down)
	1 Bit	I	C-WT-	DPT_Step	0/1	[Ix] [Short Press] Stop/Step Shutter (Switched)	Switching of 0/1 (Stop/Step Up/Down)
	4 Bit	O	C--T-	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Short Press] Brighter	Increase Brightness
	4 Bit	O	C--T-	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Short Press] Darker	Decrease Brightness
	4 Bit	I	C-WT-	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Short Press] Brighter/Darker	Switch Bright/Dark
	1 Bit	O	C--T-	DPT_Switch	0/1	[Ix] [Short Press] Light On	Sending of 1 (On)
	1 Bit	O	C--T-	DPT_Switch	0/1	[Ix] [Short Press] Light On/Off	0/1

1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Short Press] Light Off	Sending of 0 (Off)
1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Short Press] Run Scene	Sending of 0 - 63
1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Short Press] Save Scene	Sending of 128 - 191
1 Byte	O	C - - T -	DPT_Value_1_Ucount	0 - 255	[Ix] [Short Press] Constant Value (Integer)	0 - 255
1 Byte	O	C - - T -	DPT_Scaling	0% - 100%	[Ix] [Short Press] Constant Value (Percentage)	0% - 100%
2 Bytes	O	C - - T -	DPT_Value_2_Ucount	0 - 65535	[Ix] [Short Press] Constant Value (Integer)	0 - 65535
2 Bytes	O	C - - T -	9.xxx	-671088.64 - 670433.28	[Ix] [Short Press] Constant Value (Float)	Float Value
1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] 0	Sending of 0
1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] 1	Sending of 1
1 Bit	I	C - W T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] 0/1 Switching	Switching 0/1
1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Switch/Sensor] [Rising Edge] Move Up Shutter	Sending of 0 (Up)
1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Switch/Sensor] [Rising Edge] Move Down Shutter	Sending of 1 (Down)
1 Bit	I	C - W T -	DPT_UpDown	0/1	[Ix] [Switch/Sensor] [Rising Edge] Move Up/Down Shutter	Switching 0/1 (Up/Down)
1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Switch/Sensor] [Rising Edge] Stop/Step Up Shutter	Sending of 0 (Stop/Step Up)
1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Switch/Sensor] [Rising Edge] Stop/Step Down Shutter	Sending of 1 (Stop/Step Down)
1 Bit	I	C - W T -	DPT_Step	0/1	[Ix] [Switch/Sensor] [Rising Edge] Stop/Step Shutter (Switched)	Switching of 0/1 (Stop/Step Up/Down)
1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] Light On	Sending of 1 (On)
1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] Light Off	Sending of 0 (Off)
1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] Light On/Off	0/1
4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Switch/Sensor] [Rising Edge] Brighter	Increase Brightness
4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Switch/Sensor] [Rising Edge] Darker	Decrease Brightness
4 Bit	I	C - W T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Switch/Sensor] [Rising Edge] Brighter/Darker	Switch Bright/Dark
1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Switch/Sensor] [Rising Edge] Run Scene	Sending of 0 - 63

	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Switch/Sensor] [Rising Edge] Save Scene	Sending of 128 - 191
	1 Byte	O	C - - T -	DPT_Value_1_Ucount	0 - 255	[Ix] [Switch/Sensor] [Rising Edge] Constant Value (Integer)	0 - 255
	1 Byte	O	C - - T -	DPT_Scaling	0% - 100%	[Ix] [Switch/Sensor] [Rising Edge] Constant Value (Percentage)	0% - 100%
	2 Bytes	O	C - - T -	DPT_Value_2_Ucount	0 - 65535	[Ix] [Switch/Sensor] [Rising Edge] Constant Value (Integer)	0 - 65535
	2 Bytes	O	C - - T -	9.xxx	-671088.64 - 670433.28	[Ix] [Switch/Sensor] [Rising Edge] Constant Value (Float)	Float Value
	1 Bit	O	C - - T -	DPT_Ack	0/1	[Ix] [Pulse Counter] Counter	Send 1
	1 Byte	O	C R - T -	DPT_Value_1_Ucount	0 - 255	[Ix] [Pulse Counter] Counter	Number of Pulses
	2 Bytes	O	C R - T -	DPT_Value_2_Ucount	0 - 65535	[Ix] [Pulse Counter] Counter	Number of Pulses
	2 Bytes	O	C R - T -	DPT_Power	-671088.64 - 670433.28 kW	[Ix] [Pulse Counter] Counter	Power (kW)
	2 Bytes	O	C R - T -	DPT_Value_Volume_Flow		[Ix] [Pulse Counter] Counter	Flow (l/h)
	4 Bytes	O	C R - T -	DPT_Value_4_Ucount	0 - 4294967295	[Ix] [Pulse Counter] Counter	Number of Pulses
	4 Bytes	O	C R - T -	1.xxx	0/1	[Ix] [Pulse Counter] Counter	Flow Rate (m3/h)
	4 Bytes	O	C R - T -	DPT_ActiveEnergy	0 - 2147483647	[Ix] [Pulse Counter] Counter	Energy (Wh)
	4 Bytes	O	C R - T -	DPT_ActiveEnergy_kWh	0 - 2147483647	[Ix] [Pulse Counter] Counter	Energy (kWh)
	4 Bytes	O	C R - T -	DPT_Value_Power	-3.4E+38 W - 3.4E+38 W	[Ix] [Pulse Counter] Counter	Power (W)
	4 Bytes	O	C R - T -	DPT_Value_Volume		[Ix] [Pulse Counter] Counter	Volume (m3)
	1 Bit	I/O	C R W T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] Edge	0/1
48, 57	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Short Press] Shutter Status (Input)	0% = Top; 100% = Bottom
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Short Press] Dimming Status (Input)	0% - 100%
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Switch/Sensor] [Rising Edge] Dimming Status (Input)	0% - 100%
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Switch/Sensor] [Rising Edge] Shutter Status (Input)	0% = Top; 100% = Bottom
	1 Bit	I	C - W T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] 0/1 Switching (Immediate Object)	Switching 0/1
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] 0 (Immediate Object)	Sending of 0
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Rising Edge] 1 (Immediate Object)	Sending of 1
	1 Bit	I/O	C R W T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] Edge (Immediate Object)	0/1
49, 58	1 Bit	I	C - W - -	DPT_Reset	0/1	[Ix] [Pulse Counter] Reset	0 = No Action; 1 = Reset
	1 Bit	O	C R - T -	DPT_Alarm	0/1	[Ix] [Switch/Sensor] Alarm: Breakdown or Sabotage	1 = Alarm; 0 = No Alarm
50, 59	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Double Press] 0	Sending of 0
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Double Press] 1	Sending of 1

	1 Bit	I	C - W T -	DPT_Switch	0/1	[Ix] [Double Press] 0/1 Switching	Switching 0/1
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Double Press] Move Up Shutter	Sending of 0 (Up)
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Double Press] Move Down Shutter	Sending of 1 (Down)
	1 Bit	I	C - W T -	DPT_UpDown	0/1	[Ix] [Double Press] Move Up/Down Shutter	Switching 0/1 (Up/Down)
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Double Press] Stop/Step Up Shutter	Sending of 0 (Stop/Step Up)
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Double Press] Stop/Step Down Shutter	Sending of 1 (Stop/Step Down)
	1 Bit	I	C - W T -	DPT_Step	0/1	[Ix] [Double Press] Stop/Step Shutter (Switched)	Switching of 0/1 (Stop/Step Up/Down)
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Double Press] Brighter	Increase Brightness
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Double Press] Darker	Decrease Brightness
	4 Bit	I	C - W T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Double Press] Brighter/Darker	Switch Bright/Dark
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Double Press] Light On	Sending of 1 (On)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Double Press] Light Off	Sending of 0 (Off)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Double Press] Light On/Off	0/1
	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Double Press] Run Scene	Sending of 0 - 63
	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Double Press] Save Scene	Sending of 128 - 191
	1 Byte	O	C - - T -	DPT_Value_1_Ucount	0 - 255	[Ix] [Double Press] Constant Value (Integer)	0 - 255
	1 Byte	O	C - - T -	DPT_Scaling	0% - 100%	[Ix] [Double Press] Constant Value (Percentage)	0% - 100%
	2 Bytes	O	C - - T -	DPT_Value_2_Ucount	0 - 65535	[Ix] [Double Press] Constant Value (Integer)	0 - 65535
	2 Bytes	O	C - - T -	9.xxx	-671088.64 - 670433.28	[Ix] [Double Press] Constant Value (Float)	Float Value
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] 0	Sending of 0
	1 Bit	I	C - W T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] 0/1 Switching	Switching 0/1
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] 1	Sending of 1
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Switch/Sensor] [Falling Edge] Brighter	Increase Brightness
	4 Bit	I	C - W T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Switch/Sensor] [Falling Edge] Brighter/Darker	Switch Bright/Dark

	2 Bytes	O	C - - T -	9.xxx	-671088.64 - 670433.28	[Ix] [Switch/Sensor] [Falling Edge] Constant Value (Float)	Float Value
	2 Bytes	O	C - - T -	DPT_Value_2_Ucount	0 - 65535	[Ix] [Switch/Sensor] [Falling Edge] Constant Value (Integer)	0 - 65535
	1 Byte	O	C - - T -	DPT_Value_1_Ucount	0 - 255	[Ix] [Switch/Sensor] [Falling Edge] Constant Value (Integer)	0 - 255
	1 Byte	O	C - - T -	DPT_Scaling	0% - 100%	[Ix] [Switch/Sensor] [Falling Edge] Constant Value (Percentage)	0% - 100%
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Switch/Sensor] [Falling Edge] Darker	Decrease Brightness
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] Light Off	Sending of 0 (Off)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] Light On	Sending of 1 (On)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] Light On/Off	0/1
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Switch/Sensor] [Falling Edge] Move Down Shutter	Sending of 1 (Down)
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Switch/Sensor] [Falling Edge] Move Up Shutter	Sending of 0 (Up)
	1 Bit	I	C - W T -	DPT_UpDown	0/1	[Ix] [Switch/Sensor] [Falling Edge] Move Up/Down Shutter	Switching 0/1 (Up/Down)
	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Switch/Sensor] [Falling Edge] Run Scene	Sending of 0 - 63
	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Switch/Sensor] [Falling Edge] Save Scene	Sending of 128 - 191
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Switch/Sensor] [Falling Edge] Stop/Step Down Shutter	Sending of 1 (Stop/Step Down)
	1 Bit	I	C - W T -	DPT_Step	0/1	[Ix] [Switch/Sensor] [Falling Edge] Stop/Step Shutter (Switched)	Switching of 0/1 (Stop/Step Up/Down)
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Switch/Sensor] [Falling Edge] Stop/Step Up Shutter	Sending of 0 (Stop/Step Up)
51, 60	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Double Press] Shutter Status (Input)	0% = Top; 100% = Bottom
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Double Press] Dimming Status (Input)	0% - 100%
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Switch/Sensor] [Falling Edge] Dimming Status (Input)	0% - 100%
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Switch/Sensor] [Falling Edge] Shutter Status (Input)	0% = Top; 100% = Bottom
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] 0 (Immediate Object)	Sending of 0
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] 1 (Immediate Object)	Sending of 1

	1 Bit	I	C - W T -	DPT_Switch	0/1	[Ix] [Switch/Sensor] [Falling Edge] 0/1 Switching (Immediate Object)	Switching 0/1
52, 61	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Long Press] 0	Sending of 0
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Long Press] 1	Sending of 1
	1 Bit	I	C - W T -	DPT_Switch	0/1	[Ix] [Long Press] 0/1 Switching	Switching 0/1
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Long Press] Move Up Shutter	Sending of 0 (Up)
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Long Press] Move Down Shutter	Sending of 1 (Down)
	1 Bit	I	C - W T -	DPT_UpDown	0/1	[Ix] [Long Press] Move Up/Down Shutter	Switching 0/1 (Up/Down)
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Long Press] Stop/Step Up Shutter	Sending of 0 (Stop/Step Up)
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Long Press] Stop/Step Down Shutter	Sending of 1 (Stop/Step Down)
	1 Bit	I	C - W T -	DPT_Step	0/1	[Ix] [Long Press] Stop/Step Shutter (Switched)	Switching of 0/1 (Stop/Step Up/Down)
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Long Press] Brighter	Long Pr. -> Brighter; Release -> Stop
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Long Press] Darker	Long Pr. -> Darker; Release -> Stop
	4 Bit	I	C - W T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Long Press] Brighter/Darker	Long Pr. -> Brighter/Darker; Release -> Stop
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Long Press] Light On	Sending of 1 (On)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Long Press] Light Off	Sending of 0 (Off)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Long Press] Light On/Off	0/1
	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Long Press] Run Scene	Sending of 0 - 63
	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Long Press] Save Scene	Sending of 128 - 191
	1 Byte	O	C - - T -	DPT_Value_1_Ucount	0 - 255	[Ix] [Long Press] Constant Value (Integer)	0 - 255
	1 Byte	O	C - - T -	DPT_Scaling	0% - 100%	[Ix] [Long Press] Constant Value (Percentage)	0% - 100%
	2 Bytes	O	C - - T -	DPT_Value_2_Ucount	0 - 65535	[Ix] [Long Press] Constant Value (Integer)	0 - 65535
	2 Bytes	O	C - - T -	9.xxx	-671088.64 - 670433.28	[Ix] [Long Press] Constant Value (Float)	Float Value
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Triple Press] Stop/Step Up Shutter	Sending of 0 (Stop/Step Up)
	1 Bit	I	C - W T -	DPT_Step	0/1	[Ix] [Triple Press] Stop/Step Shutter (Switched)	Switching of 0/1 (Stop/Step Up/Down)
	1 Bit	O	C - - T -	DPT_Step	0/1	[Ix] [Triple Press] Stop/Step Down Shutter	Sending of 1 (Stop/Step Down)
	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Triple Press] Save Scene	Sending of 128 - 191

	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Ix] [Triple Press] Run Scene	Sending of 0 - 63
	1 Bit	I	C - W T -	DPT_UpDown	0/1	[Ix] [Triple Press] Move Up/Down Shutter	Switching 0/1 (Up/Down)
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Triple Press] Move Up Shutter	Sending of 0 (Up)
	1 Bit	O	C - - T -	DPT_UpDown	0/1	[Ix] [Triple Press] Move Down Shutter	Sending of 1 (Down)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Triple Press] Light On/Off	0/1
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Triple Press] Light On	Sending of 1 (On)
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Triple Press] Light Off	Sending of 0 (Off)
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Triple Press] Darker	Decrease Brightness
	1 Byte	O	C - - T -	DPT_Scaling	0% - 100%	[Ix] [Triple Press] Constant Value (Percentage)	0% - 100%
	2 Bytes	O	C - - T -	DPT_Value_2_Ucount	0 - 65535	[Ix] [Triple Press] Constant Value (Integer)	0 - 65535
	1 Byte	O	C - - T -	DPT_Value_1_Ucount	0 - 255	[Ix] [Triple Press] Constant Value (Integer)	0 - 255
	2 Bytes	O	C - - T -	9.xxx	-671088.64 - 670433.28	[Ix] [Triple Press] Constant Value (Float)	Float Value
	4 Bit	I	C - W T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Triple Press] Brighter/Darker	Switch Bright/Dark
	4 Bit	O	C - - T -	DPT_Control_Dimming	0x0/0x8 (Stop) 0x1...0x7 (Dec.) 0x9...0xF (Inc.)	[Ix] [Triple Press] Brighter	Increase Brightness
53, 62	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Triple Press] 1	Sending of 1
	1 Bit	I	C - W T -	DPT_Switch	0/1	[Ix] [Triple Press] 0/1 Switching	Switching 0/1
	1 Bit	O	C - - T -	DPT_Switch	0/1	[Ix] [Triple Press] 0	Sending of 0
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Long Press] Dimming Status (Input)	0% - 100%
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Long Press] Shutter Status (Input)	0% = Top; 100% = Bottom
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Triple Press] Shutter Status (Input)	0% = Top; 100% = Bottom
	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix] [Triple Press] Dimming Status (Input)	0% - 100%
	54, 63	1 Bit	O	C - - T -	DPT_Trigger	0/1	[Ix] [Long Press/Release] Stop Shutter
	64	1 Byte	I	C - W - -	DPT_SceneNumber	0 - 63	[Motion Detector] Scene Input
	65	1 Byte	O	C - - T -	DPT_SceneControl	0-63; 128-191	[Motion Detector] Scene Output
	66, 103	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[Ix] Luminosity
	67, 104	1 Bit	O	C R - T -	DPT_Alarm	0/1	[Ix] Open Circuit Error
	68, 105	1 Bit	O	C R - T -	DPT_Alarm	0/1	[Ix] Short Circuit Error
	69, 106	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[Ix] Presence State (Scaling)

70, 107	1 Byte	O	CR-T-	DPT_HVACMode	1=Comfort 2=Standby 3=Economy 4=Building Protection	[Ix] Presence State (HVAC)	Auto, Comfort, Standby, Economy, Building Protection
71, 108	1 Bit	O	CR-T-	DPT_Switch	0/1	[Ix] Presence State (Binary)	Binary Value
	1 Bit	O	CR-T-	DPT_Start	0/1	[Ix] Presence: Slave Output	1 = Motion Detected
72, 109	1 Bit	I	C-W--	DPT_Window_Door	0/1	[Ix] Presence Trigger	Binary Value to Trigger the Presence Detection
73, 110	1 Bit	I	C-W--	DPT_Start	0/1	[Ix] Presence: Slave Input	0 = Nothing; 1 = Detection from slave device
74, 111	2 Bytes	I/O	CRW--	DPT_TimePeriodSec	0 - 65535	[Ix] Presence: Waiting Time	0 - 65535 s
75, 112	2 Bytes	I/O	CRW--	DPT_TimePeriodSec	0 - 65535	[Ix] Presence: Listening Time	1 - 65535 s
76, 113	2 Bytes	I/O	CRW--	DPT_TimePeriodMin	0 - 65535	[Ix] Presence: Safety Time	0 - 1440 min
77, 114	1 Byte	I/O	CRW--	DPT_Value_1_Ucount	0 - 255	[Ix] Presence: Number of Detections of the Filter	2 - 5
78, 115	1 Byte	I/O	CRW--	DPT_Value_1_Ucount	0 - 255	[Ix] Presence: Filter Detection Window	15 - 60 s
79, 116	1 Bit	I	C-W--	DPT_Enable	0/1	[Ix] Presence: Enable	0 = Disable; 1 = Enable
	1 Bit	I	C-W--	DPT_Enable	0/1	[Ix] Presence: Enable	0 = Enable; 1 = Disable
80, 117	1 Bit	I/O	CRW--	DPT_DayNight	0/1	[Ix] Presence: Day/Night	0 = Day; 1 = Night
	1 Bit	I/O	CRW--	DPT_DayNight	0/1	[Ix] Presence: Day/Night	0 = Night; 1 = Day
81, 118	1 Bit	O	CR-T-	DPT_Occupancy	0/1	[Ix] Presence: Occupancy State (Master Output)	0 = Not Occupied; 1 = Occupied
	1 Bit	I	C-W--	DPT_Occupancy	0/1	[Ix] Presence: Occupancy State (Master Input)	0 = Not Occupied; 1 = Occupied
82, 119	1 Bit	I	C-W--	DPT_Switch	0/1	[Ix] Presence: Access Guest/Employee	0 = Guest; 1 = Employee
	1 Bit	I	C-W--	DPT_Switch	0/1	[Ix] Presence: Access Guest/Employee	0 = Employee; 1 = Guest
83, 120	1 Bit	I	C-W--	DPT_Bool	0/1	[Ix] Presence: Sold/Unsold Room	0 = Unsold; 1 = Sold
	1 Bit	I	C-W--	DPT_Bool	0/1	[Ix] Presence: Sold/Unsold Room	0 = Sold; 1 = Unsold
84, 121	1 Bit	I	C-W--	DPT_Start	0/1	[Ix] External Motion Detection	0 = Nothing; 1 = Motion detected by an external sensor
85, 91, 97, 122, 128, 134	1 Byte	O	CR-T-	DPT_Scaling	0% - 100%	[Ix][Cx] Detection State (Scaling)	0 - 100%
86, 92, 98, 123, 129, 135	1 Byte	O	CR-T-	DPT_HVACMode	1=Comfort 2=Standby 3=Economy 4=Building Protection	[Ix][Cx] Detection State (HVAC)	Auto, Comfort, Standby, Economy, Building Protection
87, 93, 99, 124, 130, 136	1 Bit	O	CR-T-	DPT_Switch	0/1	[Ix][Cx] Detection State (Binary)	Binary Value
88, 94, 100, 125, 131, 137	1 Bit	I	C-W--	DPT_Enable	0/1	[Ix][Cx] Enable Channel	According to parameters
89, 95, 101, 126, 132, 138	1 Bit	I	C-W--	DPT_Switch	0/1	[Ix][Cx] Force State	0 = No Detection; 1 = Detection

90, 96, 102, 127, 133, 139	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Ix][Cx] Luminosity Threshold	1 - 100%
140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171	1 Bit	I	C - W - -	DPT_Bool	0/1	[LF] (1-Bit) Data Entry x	Binary Data Entry (0/1)
172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187	1 Byte	I	C - W - -	DPT_Value_1_Ucount	0 - 255	[LF] (1-Byte) Data Entry x	1-Byte Data Entry (0-255)
188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203	2 Bytes	I	C - W - -	DPT_Value_2_Ucount	0 - 65535	[LF] (2-Byte) Data Entry x	2-Byte Data Entry
	2 Bytes	I	C - W - -	DPT_Value_2_Count	-32768 - 32767	[LF] (2-Byte) Data Entry x	2-Byte Data Entry
	2 Bytes	I	C - W - -	9.xxx	-671088.64 - 670433.28	[LF] (2-Byte) Data Entry x	2-Byte Data Entry
204, 205, 206, 207, 208, 209, 210, 211	4 Bytes	I	C - W - -	DPT_Value_4_Count	-2147483648 - 2147483647	[LF] (4-Byte) Data Entry x	4-Byte Data Entry
212, 213, 214, 215, 216, 217, 218, 219, 220, 221	1 Bit	O	C R - T -	DPT_Bool	0/1	[LF] Function x - Result	(1-Bit) Boolean
	1 Byte	O	C R - T -	DPT_Value_1_Ucount	0 - 255	[LF] Function x - Result	(1-Byte) Unsigned
	2 Bytes	O	C R - T -	DPT_Value_2_Ucount	0 - 65535	[LF] Function x - Result	(2-Byte) Unsigned
	4 Bytes	O	C R - T -	DPT_Value_4_Count	-2147483648 - 2147483647	[LF] Function x - Result	(4-Byte) Signed
	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[LF] Function x - Result	(1-Byte) Percentage
	2 Bytes	O	C R - T -	DPT_Value_2_Count	-32768 - 32767	[LF] Function x - Result	(2-Byte) Signed
	2 Bytes	O	C R - T -	9.xxx	-671088.64 - 670433.28	[LF] Function x - Result	(2-Byte) Float
222	1 Bit	O	C R - T -	DPT_Trigger	0/1	[Heartbeat] Object to Send '1'	Sending of '1' Periodically
223	1 Bit	O	C R - T -	DPT_Trigger	0/1	[Heartbeat] Device Recovery	Send 0
224	1 Bit	O	C R - T -	DPT_Trigger	0/1	[Heartbeat] Device Recovery	Send 1

Join and send us your inquiries
about Zennio devices:

<https://support.zennio.com>

Zennio Avance y Tecnología S.L.
C/ Río Jarama, 132. Nave P-8.11
45007 Toledo, Spain.

Tel. +34 925 232 002.

www.zennio.com
info@zennio.com